

AYUNMAI

YUNMAI Massage Gun mini User Manual - Simplify Your Workout -

your physician before using this product. Key Information - - - - - - - - - - - - - / P01 be used on clothed areas. Users can press this product on the Product Introduction - - - - - - - - - - - - / P04 - 05 pain or adverse reaction. Basic Parameters - - - - - - - - - - - - / P14

Frequently Asked Questions - - - - - - - - - / P15 - 16

manual is properly kept.

Application scope:

and after workout.

warnings in this manual carefully before use.

enter the vents of the product.

Do not throw or drop the product on purpose.

Do not disassemble the product

close contact with these areas.

 Not for children under 8 years old. Children are not allow to use, clean and maintain the product without supervision

> Pregnant women Pacemaker wearer

Do not place the product in or near sources of fire.

Precautions

consult the doctor before using. in the instructions.

Undergone surgery recently

training also serves as a type of therapy in many circumstance

Daily massage to relax the body.

Application of massage gun

caused by sedentary and poor posture.

Gun headForce feedback indicator

Storage box

 Ball head: For large muscle groups. Charging cable

U-Shaped head Cushion head Ball head

U-Shaped head: suitable for massaging the muscles on both sides of the spine and shoulder.
Cushion head: suitable for relaxing most muscles of the whole body by simulating hollow palm flapping muscles. Tips:

Illustrations of products, accessories and user interface in the manual are all schematic diagrams for reference only. Due to product update and upgrade, the actual product may be slightly different from that in the schematic diagram. Please refer to the

Installation and removal

ed on the massage demand, select the massage head to insert into the round hole in front of the massage gun until it cannot be inserted, which is in a tight state. Press and hold the ON/OFF button at the bottom for 2 second to start the massage gun. Then, the power indicators (three total) of different number will light up according to battery voltage.

Press the ON/OFF button at the bottom in any mode for immediate

Orange: deep massage

Red: excessive massage

indicator ") flashes continuously.

Remaining power display: When startup, the correspondi indicators in the order from left to right from the first indica show a constant white light.

Charging state

Force feedback ring indicator:

Green: comfortable force (fascia relaxation)

instructions in the manual.

Recommendations:

Select the appropriate massage head for installation, turn the massage gun, and switch to the appropriate gear bas

Meight: 430g
Dimension: 144 × 41 × 80mm

 When charging, the first indicator is always on white, and the second indicator flashes white, that is, the power is greated than 35% but less than 70%. Orange Red

 Light blue: lighter force (muscle arousal) Blue: soothes and relaxes

massage gun is fully charged.

e relaxed, and slide it back and forth slowly. In case of a

When charging, the first indicator flashes white, that is, power is less than 35%.

mode after continuous use of 10 minutes. In this case, rest

1. High temperature: when used in the environment above 40°C, the massage gun m

Battery capacity: 2600mAh Power supply mode: Rechargeable lithium battery Weight: 430g

Place the massage gun in an environment below 40°C for before starting it up for use.

for a long time, the battery will initiate low-battery protect

2. Battery capacity is " 0 ":

collectively referred to as over discharge protection.

when the battery is out of power, if the user does not charge

Keep the massage gun off, then connect the charger (pow

trigger overheating protection, causing normal startup failur

adapter), and the massage gun will automatically ente charging state. When it is fully charged, unplug the charg and the massage gun can work normally.

When the temperature of the massage gun body is too high

. Do not throw or cast the product during use

uthority to operate the equipment.

that to which the receiver is connected

For indoor use ONLY!

with other household wastes throughout the EU. To pr

an environmentally-friendly manner. Maintenance, Cleaning, Storage, Transportation

waste when it is at the end of its service life











































