 




YUNMAI Massage Gun Prime

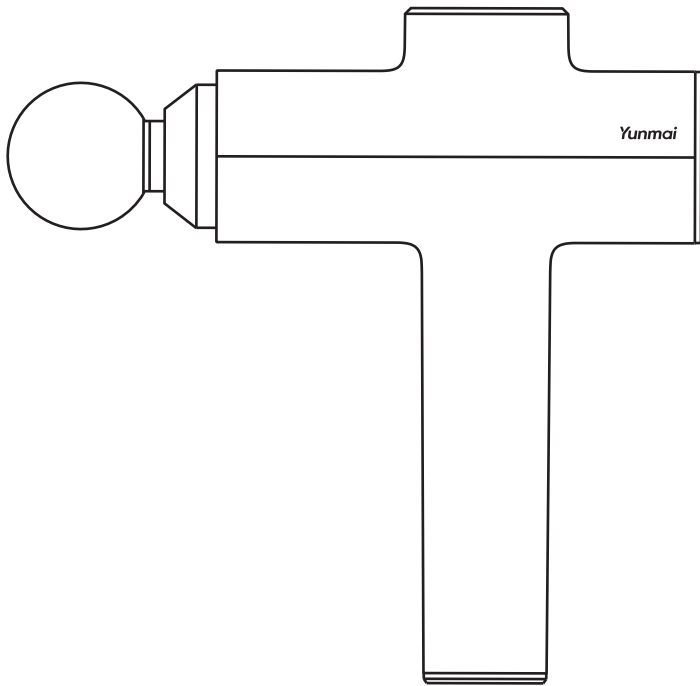

User Manual

| | |
|---|------|
| YUNMAI Massage Gun Prime User Manual | • 01 |
| YUNMAI Massagepistole Prime Benutzerhandbuch | • 17 |
| Pistolet de massage Prime YUNMAI Manuel de l'utilisateur | • 33 |
| Pistola per Massaggio YUNMAI Prime Manuale Utente | • 49 |
| Pistola de masaje YUNMAI Prime Manual de usuario | • 65 |
| Массажный пистолет Prime YUNMAI Руководство пользователя | • 81 |

Key Information

To reduce risks of malfunction, electric shock, injury, fire, death and damage to equipment, please read all statements and warnings in this manual carefully before use.

Prohibitions

- The use of this product by underaged and injured persons is strictly prohibited. In the event of muscle injury, please consult your physician before using this product.
- Do not use this product on wet or dirty skin. This product can be used on clothed areas. Users can press this product on the skin gently, move it along different spots, letting it stay at each particular spot for about 60 seconds.
- Do not use this product on body parts above the neck, nor on body parts with less muscle or bone content. This product can be only used on soft tissues when the user does not experience pain or adverse reaction.
- Do not use this product on body parts with bruises, pain or adverse reaction.
- Do not place foreign objects in the vent of the product.
- Do not immerse the product in water. Do not allow water to enter the vents of the product.
- Do not place the product in or near sources of fire.
- Do not throw or drop the product on purpose.
- Do not recharge the product with chargers other than the one provided by YUNMAI.
- Do not disassemble the product.
- Fingers, hair or other parts of the body may be trapped in the shaft and back side of the massage head. Do not come into close contact with these areas.
- Not for children under 8 years old. Children are not allowed to use, clean and maintain the product without supervision.

Statement

Those having any one of the following circumstances shall consult the doctor before using.

- Pregnant women
- Pacemaker wearer
- Undergone surgery recently
- Abnormalities in spines, joints or bones
- Complications caused by other diseases (such as neuropathy or retinal damage)

Current research focuses on the influence of vibrational training on special medical conditions and may reduce the scope for the above-mentioned contraindications.

Practical experience has shown that the combination of treatment and vibrational training also serves as a type of therapy in many circumstances. However, such an approach should be recommended by physicians, experts or therapists or be conducted in their presence.

Precautions

- Unplug the charger after the completion of charging.
- Do not use the product when it is charged.
- Please use the product according to the instructions.
- Before each use, carefully check whether the product can be used normally according to the operation methods stipulated in the instructions.




Do not touch this part to avoid pinching, when the machine is on without massage head installed.



Do not touch this part to avoid pinching, when the machine is on with massage head installed.

Product Introduction


Thank you for choosing YUNMAI Massage Gun Prime.

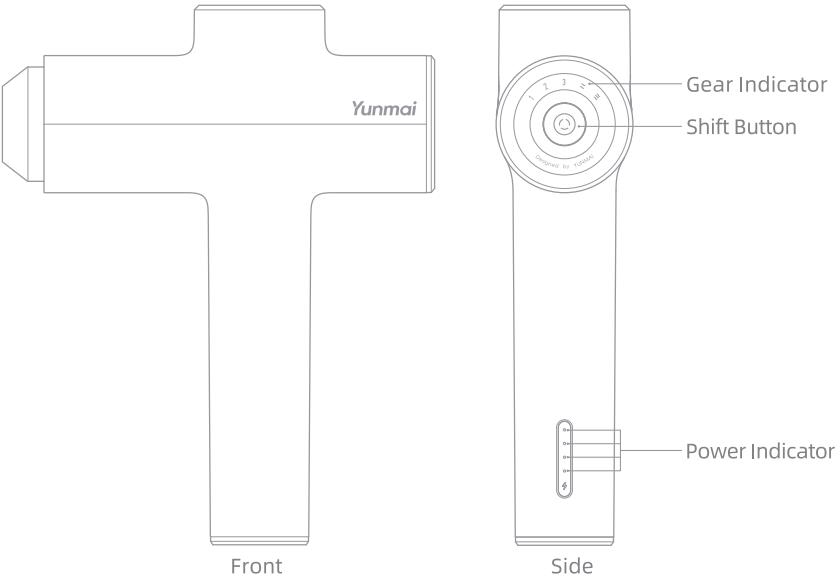

Massage Head



Ball Head
Mainly used for large muscle groups

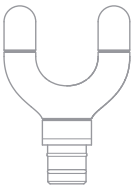

U-shaped Head
Mainly used for the neck, both sides of spines and achilles tendons




Flat Head
Mainly used to relax and shape muscle parts



Bullet Head
Mainly used to impact deep tissues.


Use Method

Operation

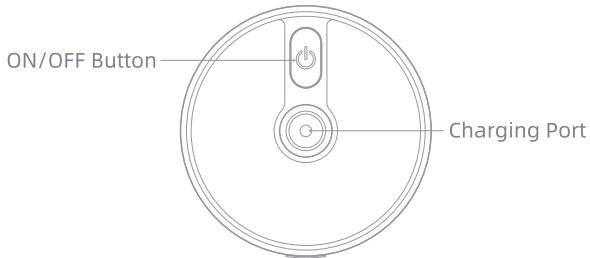

ON / OFF button:

- Press and hold the ON/OFF button for 2 seconds until the " power " and " mode " indicators light up at the same time. The massage gun will enter standard mode 1.
- Press the ON/OFF button to turn off the massage gun in any mode.

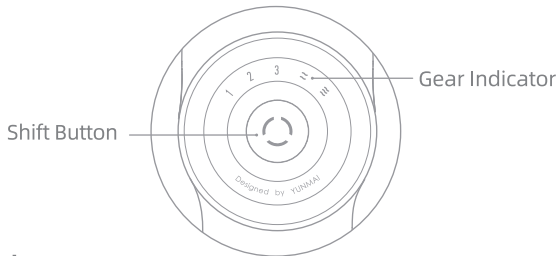


Gear indicator:

- ① 3 speeds for standard mode, 2 speeds for massage mode.

Shift button:

- After the massage gun is turned on, it will enter the standard mode 1, you can switch between standard mode 1-3 and massage mode 1-2 by a short-pressing. Massage gun will enter the standby mode with a short-pressing after massage mode 2.

- In standby-mode, massage gun will turn off without operation for 15 seconds.
- Massage gun will enter the intelligent power-off protection mode after continuous use of 10 minutes. Restart the massage gun if you need to use it.

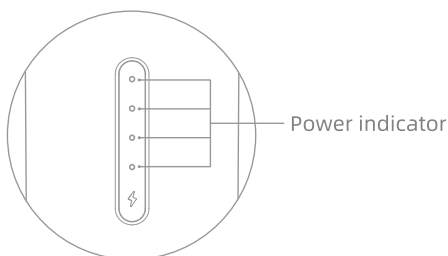

Power indicator:


- When the indicator lights are all on, the battery power is 100%.
- When three indicator lights are on, the battery power is 65%-80%.
- When two indicator lights are on, the battery power is 40%-60%.
- When one indicator light is on, the battery power is 20%-35%.
- When one indicator light flashes, the battery is low and it needs charging immediately.

(When the appliance is being charged, four indicator lights flash regularly; if the four lights stay on constantly, it's fully charged.)

Note:

When the massage mode is turned on, the motor speed changes sinusoidally, which may generate a normal phenomenon of accelerating and decelerating wind sound.

Massage Head Assembling

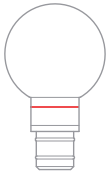


Ball Head



Bullet Head



Flat Head

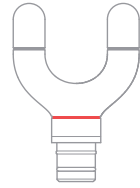

U-shaped Head

Notes:


The red solid line in the figure is the line for alignment, which is bright black in the actual product.

When assembling or replacing the massage head, please insert the massage head directly into the mouth of the massage gun until the line for alignment coincides with the mouth (as shown in the figure); when replacing the massage head, pull out the massage head directly.




Charging

The charging port is located at the bottom of the massage gun handle.

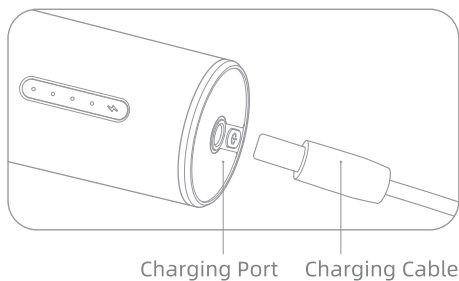


- Please fully charge the massage gun before using it for the first time.
- The input voltage is 100-240V for this charger.
- When the massage gun is charging, the power indicator flashes regularly.
- When the massage gun is fully charged, the power indicators are all on.
- The battery can be charged at any time and any power level. The product cannot be started when charging.
- If only one light is on, it means that the battery is low, please charge.

Accessories Introduction

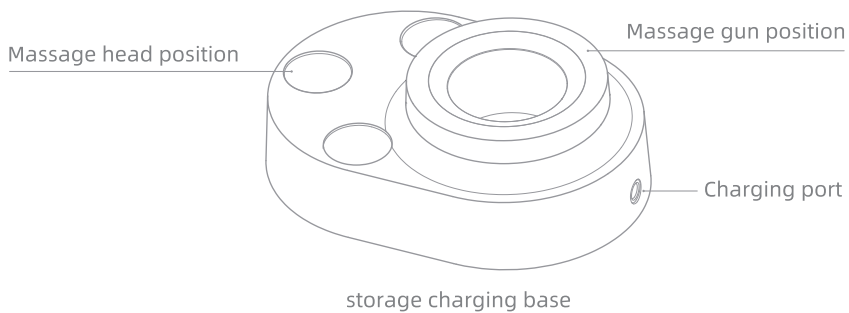


Instruction


1. Place the massager gun and massager heads into the storage charging base.

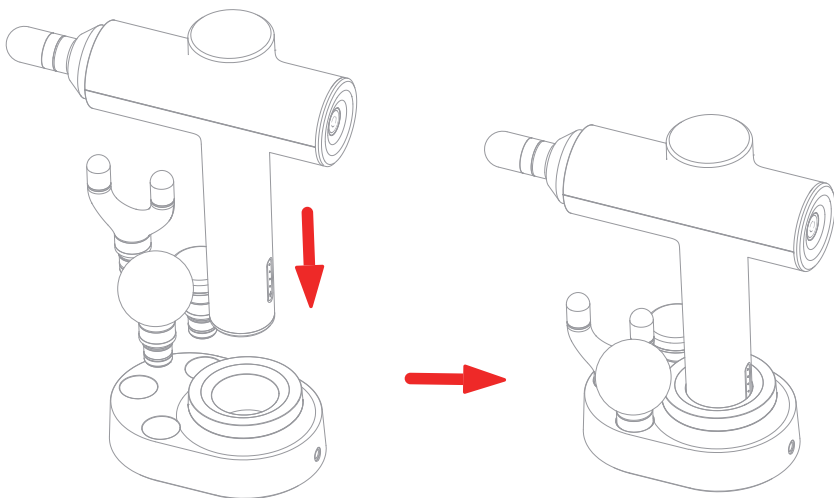

2. Connect the charging cable to the storage charging base for charging.

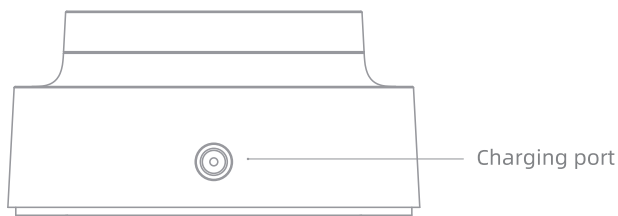

Instruction of the removable gel

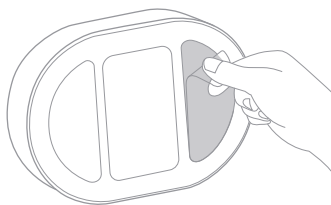

Under the charging base, there are two gels. User can remove the plastic sheet on it and stick the charging base on a clean surface. (The gel is removable, which can be washed and used repeatedly.)

Note:

Do not place the charging base on the ramp or the edge to prevent the massage gun falling off and damaged.

Do not stick the charging base on the dusty place, otherwise the stickiness of the gel will be affected.

Clean the removable gel

- When the gel is not sticky, you can wipe it with a little water and dry in the shade.
- Do not wipe it with paper, towel or any other object that are easy to drop crumb.
- Do not wash the charging base to avoid short circuit.

Basic Parameters

Name: YUNMAI Massage Gun Prime

Type: YMFG-B453

Net weight: 0.84kg

Input: 100-240V~60/50Hz 19V \equiv 1A 

Intensity gears: 5 gears for adjustment

Battery capacity: 2900mAh

Charging time: About 4h

Size: 179 × 60 × 236mm

Ambient temperature: 0~40°C

Power supply mode: Rechargeable Li-ion battery

Applicable age: Adults above the age of 18 (except pregnant women)

Frequently Asked Questions

| Troubleshooting of massage Gun Operation | |
|--|---|
| Fault description | Troubleshooting |
| The massage head slides out and falls | Check whether the massage head is installed in place |
| The product cannot be started | Check whether the power is sufficient (if the product has not been used for a long time, please charge it for more than 8 hours) |
| The product cannot be charged | Check whether the charging connector and power supply are plugged in place |
| The product stops suddenly after 10 minutes of continuous operation | This phenomenon is normal as it is caused by the setting for long-term operation protection, which switches from operation to standby mode. And the product can be restarted through short pressing |
| The product stops working after the massage head encounters the phenomenon of locked-rotor | This phenomenon is normal as it is caused by the setting for abnormal operation protection, which switches from operation to standby mode. And the product can be restarted through short pressing. |

Reasonable use of the product can effectively extend its service life

Suggestions:

- Do not throw or cast the product during use.
- Keep the maximum continuous service time lower than 30 minutes.
- Please charge the product every other month if it is not used for a long time.

Caution

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment OFF and ON, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio / TV technician for help.



Recycling

Maintenance, Cleaning, Storage, Transportation

- Clean the device with a damp towel and wipe dry with a soft cloth.
- Place the device inside the packaging box provided during storage or travelling.
- This device should be stored in an area that is dry, well ventilated and non-corrosive.
- Device should be placed no less than 250mm away from the floor, and the maximum number of layers on top of it should not be more than 5.
- This device should be packed and stored properly if it is to be left unused for a long period of time. In such circumstances, the device should be recharged once every 6 months.
- This device can be transported by car, train, sea or air.
- During transportation, this device should be gently-handled and well-secured in an upright position to avoid damage due to strong vibration, collision, rolling or falling.
- Water-proofing measures should also be in place.

Battery Directive - Information for Users



In the European Union, this label indicates that the batteries in this product should be collected separately and not be disposed of with household waste. Substances in batteries can have a potential negative impact on health and environment and you have a role in recycling waste batteries thus contributing to the protection, preservation, and improvement of the quality of the environment. You should contact your local authority or retailer for details of the collection and recycling schemes.

We, Shenzhen Yunmai Technology Co., Ltd, hereby declare that this equipment is in compliance with the applicable Directives and European Norms, and amendments. The full text of the EU declaration of conformity is available at the following internet address: www.yunmaiglobal.com