 


Insta360™ GO

QUICKSTART GUIDE

1 What's Included



Insta360 GO x 1



Charge Case x 1



Micro-USB to USB
Type-C Cable x 1



 
Easy Clip x 1



Sticky Base x 1



Charge Cable x 1



Pivot Stand x 1
Pivot Stand Base x 1



Pendant x 1



 
Documentation

Note:

Please keep the covers on the Sticky Base and Pivot Stand Base. Re-apply between uses to keep them sticky.

2 About Camera & Charge Case

■ GO




Camera Status

In standby mode (not charging)
Charging when camera is off
Fully charged when camera is off
Not enough storage
Upgrading firmware
Low battery

Status Indicator

Solid white
Solid red
Indicator off
Blue light flashes 3 times
Flashing blue
Red light flashes 3 times

■ Charge Case

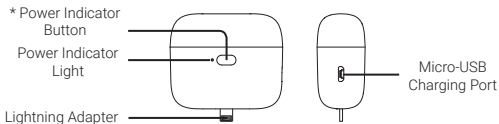

Remaining power of Charge Case

Remaining power > 50%
Remaining power: 10% ~ 50%
Remaining power < 10%

Color of Power Indicator Light

Green
Yellow
Red

Notes:

- 1) When placing GO into the Charge Case, align charging points of the camera and Charge Case.
- 2) Press the Power Indicator Button, and then check the color of the Power Indicator Light to confirm remaining power.
- 3) Before use, make sure that GO and the Charge Case are fully charged.
- 4) When remaining power is less than 10%, the Charge Case can't be used to preview and transfer footage to your phone. Recharge to resume normal use.


3 Download the App

Scan the QR code to the right (<https://www.insta360.com/download/insta360-go>) or search "**Insta360 GO**" in the App Store / Google Play to download the companion app.



4 Connect to Charge Case & Activate

1 The first time you connect GO to your phone via the Charge Case, open the app and follow the on-screen instructions to activate the camera.

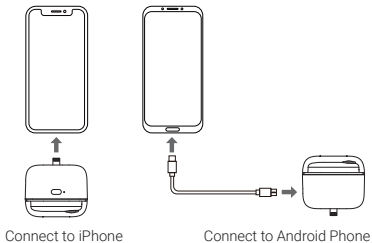

2 While connected to your phone via the Charge Case, you can download photos and videos, and review your content.

5 Standalone Use

■ Power On / Off + Reset

Press and hold the Action Button to power on GO, indicated with two short vibrations;
Press and hold the Action Button for 3 seconds to power off;
Press and hold the Action Button for 20 seconds to reset GO.

Note: If GO stays in standby mode for over 30 seconds, it will power off automatically.

■ Basic Functions

GO has four basic Action Button prompts, which can be customized to your preference in the app.

1 **QuickCapture:** Tap the Action Button once when GO is powered off to activate your QuickCapture function.

By default, this function will record a 15-second video. The start of a recording is indicated with a short vibration, followed by a flashing cyan light. A long vibration indicates the end of the recording, after which GO will power off automatically.

2 Single Tap: Tap the Action Button once when GO is powered on.

By default, this function is set to take a photo. A long vibration indicates your capture was successful.

3 Double Tap: Tap the Action Button twice in quick succession when GO is powered on.

By default, this function is set to take a Hyperlapse. A short vibration followed by a rapidly flashing cyan light indicates your recording has started. Tap again to end the recording, indicated by a long vibration.

4 Triple Tap: Tap the Action Button three times in quick succession when GO is powered on.

By default, this function is set to start a Slow Mo video recording. A short vibration followed by a slowly flashing cyan light indicates your recording has started. Tap again to end the recording, indicated by a long vibration.


■ Customize Functions

Connect GO to your phone via Bluetooth or the Charge Case. Then go to the "Settings" page and select "Camera button settings". From here, you can assign any shooting mode you like to each of the GO's four basic Action Button prompts.

For more product information, please visit <https://www.insta360.com/r/godetail>

6 Bluetooth Connection


Step 1: Turn on your phone's Bluetooth.

Step 2: Press and hold the Action Button to power on GO, indicated by two short vibrations. Then, open the app and tap the camera icon  at the bottom of the screen. Tap "Connect with Insta360 GO" and you should see a "Please choose your camera" prompt pop up. Select your GO and follow on-screen instructions to complete the connection (The name of your camera is "GO * * * * * " by default, where * * * * * is the last six digits of the serial number on the box your GO came in).

Note:

- 1) If GO stays in standby mode for over 30 seconds, it will power off automatically.
- 2) GO's effective Bluetooth range is 33 feet (10 meters) in optimal conditions.

Step 3: Having successfully connected to GO via Bluetooth, you can capture photos or videos via the App.

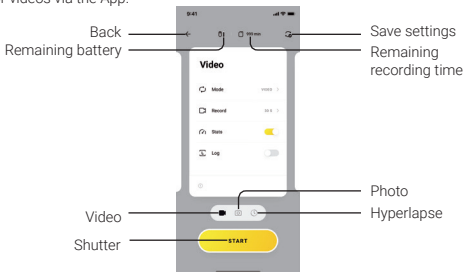


* Here the interface for default Video mode is used as an example

6 Mount Anywhere




Easy Clip

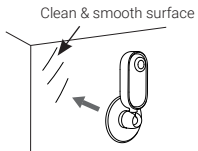

Pivot Stand + Pivot Stand Base

 The magnetic Pendant should be worn underneath your shirt



Pendant



Sticky Base

Important!

- 1)** Using its 1/4" mounting screw, the Pivot Stand can be connected to other compatible accessories.
- 2)** As thick clothing can weaken the magnetic force of the Pendant, please do not use GO with thick clothing and always test GO's stability before shooting.
- 3)** People who wear cardiac pacemakers must not wear the Pendant.
- 4)** When using the Pivot Stand and Sticky Base, please attach them to dry, clean and flat surfaces. Avoid attaching them to surfaces with strong vibrations.
- 5)** If the Sticky Base or Pivot Stand have lost stickiness, clean with water and dry for re-use. After use, re-apply their original covers to maintain stickiness. Avoid placing the Sticky Base or Pivot Stand in high- or low-temperature environments.

*** Disclaimer**

Please read this Disclaimer carefully. Using the camera and its relevant accessories means that you acknowledge and accept the terms of this disclaimer. Before every use, make sure that your accessories are functioning properly. If there's any damage or irregularity, stop using them immediately. The user is solely responsible for any damages that are not directly attributable to a quality problem with the accessory itself. For any other direct, indirect or incidental losses caused by abnormal use, such as camera damage, personal or object damage, etc., Shenzhen Arashi Vision Co., Ltd. (hereinafter referred to as 'Insta360') shall not take any responsibility.

Within the scope of state laws and regulations, Insta360 reserves the right of final explanation and revision for the commitment.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Model No.: CINGOXX/A, CINGOXX
Operation Frequency: 2402MHz~2480MHz
Maximum Power: -0.94dBm (E.I.R.P)

Manufacturer: Shenzhen Arashi Vision Company Limited

Address of Manufacturer: 6/F, Building A, Logan Century Center, Haixiu Road, Bao'an District, Shenzhen, China

The operating temperature of the device between 0°C to 45°C.

 
CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

This product can be used across EU member states.

We declare that this device is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.



1 包装内含



相机 × 1



 
充电盒 × 1



Micro-USB 转 USB Type C
数据线 × 1




简易夹 × 1



磁吸胶垫 × 1*



 充电线 × 1



转向支架 × 1
转向支架底盘 × 1*



磁吸挂绳 × 1**
(挂绳可调节)



 
文档资料

* 请勿丢弃磁吸胶垫和转向支架底盘背面粘胶上附有的**收纳膜**。胶贴使用完毕后，请将收纳膜光滑的一面贴回胶贴。

** 磁吸挂绳配件的白色面为正面。

2 关于相机 & 充电盒

■ 相机



相机状态

待机

放入充电盒，关机充电中

放入充电盒，关机充满电

内存已满

固件升级

低电提示

相机指示灯状态

白灯长亮

红灯长亮

 
灯灭

蓝灯快闪 3 下

蓝灯快闪

红灯快闪 3 下

■ 充电盒



充电盒电量指示说明：

充电盒电量

当前电量 > 50%

当前电量为 10% ~ 50%

当前电量 < 10%

充电盒指示灯颜色

绿灯

黄灯

红灯

注意：

- 1) 相机放入充电盒充电时，请注意充电接触点的对应。
- 2) 按下**电量指示按键**后，可根据充电盒指示灯颜色，判断充电盒的剩余电量。当充电盒电量小于 10% 时，相机无法通过连接充电盒进行数据传输。
- 3) 使用前，请先将相机和充电盒充满电。

3 App 下载

手机扫描右侧二维码 (<https://www.insta360.com/download/insta360-go>) 或前往 App Store、应用宝搜索“Insta360 GO”下载安装 App。



4 连接充电盒 & 激活

- 1 首次使用，请先通过充电盒将相机连接至手机，打开 App，根据 App 操作提示激活相机。



连接至 iPhone 手机



连接至 Android 手机



- 2 通过充电盒连接至手机时，还可自动下载照片与视频，浏览、播放相机内拍摄文件。

5 独立使用

■ 开机 + 关机 + 复位

按住相机按键，相机短震两次，然后**开机**；

长按相机按键 3 秒，相机**关机**；

长按相机按键 20 秒，相机**复位**。

注意：相机待机状态下，若 **30 秒内**对相机无任何操作，相机将自动关机。

■ 基本功能

QuickCapture（快速录像）

关机状态，默认模式下，**单击**相机按键，相机短震一次，青色指示灯闪烁，相机自动开机并开始录像。完成录像后，相机会长震提醒录像结束，然后自动关机。

拍照：

开机后，相机默认进入拍照模式，**单击**相机按键拍照，相机会长震提示拍照结束。

移动延时

开机后，默认模式下，**双击**相机按键，相机短震一次，青色指示灯快闪，开始移动延时录像。再次单击相机按键，相机会长震提醒录像结束。

慢动作

开机后，默认模式下，**三击**相机按键，相机短震一次，青色指示灯慢闪，开始慢动作录像。再次单击相机按键，相机会长震提醒录像结束。


■ 自定义功能

按键对应的拍摄功能和参数可以通过 GO App 修改。

* 更多产品功能使用，请访问：<https://www.insta360.com/r/godetail>

6 蓝牙控制

步骤 1: 打开手机蓝牙。

步骤 2: 按住相机按键，相机短震两次，然后开机。与此同时，打开 GO App，点击 App 页面下方的相机图标，在弹出的 App 页面上点击“**连接 Insta360 GO**”，当 App 页面跳转至提示【**请选择你的相机**】，选择你需要连接的相机（相机名称默认为“GO *****”，*****为相机序列号后六位，可在产品包装盒上查看相机序列号），然后按照 App 页面提示完成连接操作。

注意:


- 1) 相机待机状态下，若 30 秒内对相机无任何操作，相机将自动关机。
- 2) 相机蓝牙传输的有效距离（无干扰无遮挡）为 10 米。

步骤 3: 连接成功后，可进入 App 拍摄页，进行录像、拍照等操作。



(此处以默认录像页面为例)

6 使用方式

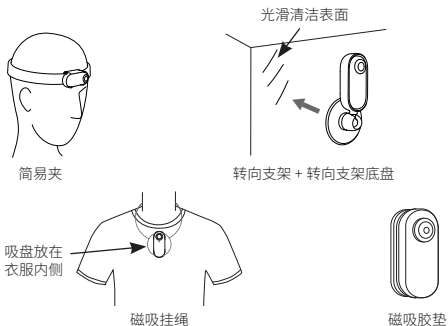

重要事项：

- 1) 转向支架底部有 1/4" 螺口，可转接其他配件使用。
- 2) 磁吸挂绳吸盘放在衣服内侧时，由于服饰厚度对磁铁吸力会产生一定影响，使用时，请避免将相机贴至太厚的衣服。
- 3) 佩戴心脏起搏器者请勿使用磁吸挂绳。
- 4) 使用转向支架底盘和磁吸胶垫时，请将其粘贴至干燥、干净、平整表面。不建议在强烈震动表面粘贴这两个配件。
- 5) 转向支架底盘和磁吸胶垫的胶贴失去粘性时，清洗、晾干后可继续使用。使用完毕后，请贴回收纳膜光滑面。请勿将胶贴放置在高温或低于零度的地方。

 
* 免责声明

请仔细阅读本声明，一旦使用 GO 及其相关配件，即视为对本声明的全部认可和接受。

每次使用前，请仔细检查相机及其相关配件，若出现破损、变形，请勿使用。对于非产品质量问题、非正常使用引发的其他直接、间接或附带损失，如相机损坏、人员或物体损伤，由用户自行承担，深圳岚锋创视网络科技有限公司（以下简称“Insta360”）不承担任何赔偿责任。用户应遵循包括但不限于本文提及的使用注意事项。

在国家法律法规范围内，本承诺解释权、修改权归 Insta360 所有。

1 상자에



Insta360 GO x 1



충구 케이스 x 1



마이크로 USB 대 USB
유형 C 케이블 x 1



 
간편한 클립 x 1



끈적 끈적한 기초 x 1



충전 케이블 x 1



피벗 스탠드 x 1
피벗 스탠드베이스 x 1



자석 펜던트 x 1



 
선적 서류 비치

노트 :

스티키베이스와 피벗 스탠드베이스에 커버를 보관하십시오. 끈적 거리지 않도록 사용
사이에 다시 적용하십시오.

2 카메라 정보 & 청구 케이스

■ GO




카메라 상태

대기 모드 (충전되지 않음)
 카메라가 꺼져있을 때 충전
 카메라가 꺼져있을 때 완전히 충전 됨
 충분한 저장
 펌웨어 업그레이드
 배터리 부족

상태 표시기

단색 흰색
 빨간색으로 켜짐
 표시기 꺼짐
 푸른 빛이 3 번 깜박임
 파란색으로 깜박임
 빨간색 표시등이 3 번 깜박입니다.

 ■ 청구 케이스



충전 케이스의 잔량

남은 전력 > 50%

남은 전력 : 10% ~ 50%

남은 전력 < 10%

전원 표시 등 색상

녹색

노랑

빨간

노트 :

- 1) 충전 케이스에 GO 를 넣을 때 카메라와 충전 케이스의 충전 지점을 정렬하십시오 .
- 2) 전원 표시 등 버튼을 누른 다음 전원 표시등의 색상을 확인하여 남은 전원을 확인하십시오 .
- 3) 사용하기 전에 GO 와 충전 케이스가 완전히 충전되었는지 확인하십시오 .
- 4) 잔여 전력이 10 % 미만이면 충전 사례를 사용하여 휴대 전화로 미리보기 및 전송할 수 없습니다 . 재충전하여 정상적인 사용을 재개하십시오 .

3 앱 다운로드

오른쪽 (<https://www.insta360.com/download/insta360-go>) 의 QR 코드를 스캔하거나 App Store / Google Play 에서 "Insta360 GO" 를 검색하여 컴패니언 앱을 다운로드하십시오 .




4 충전 케이스에 연결 및 활성화

① 처음 충전 케이스를 통해 휴대 전화에 연결하면 앱을 열고 화면의 안내에 따라 카메라를 활성화하십시오.



iPhone 에 연결

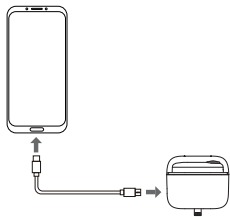

Android 휴대 전화에 연결

② 청구 케이스를 통해 휴대 전화에 연결되어있는 동안 사진과 비디오를 다운로드하고 콘텐츠를 검토 할 수 있습니다.

5 독립형 사용

■ 전원 켜기 / 끄기 + 재설정

두 번의 짧은 진동으로 표시되는 GO 버튼의 전원을 켜려면 Action 버튼을 길게 누르십시오. 전원 버튼을 3 초 동안 누르고 있으면 전원이 꺼집니다. 작업 버튼을 20 초 동안 누르고 있으면 GO 가 재설정됩니다.

참고 : GO 가 30 초 이상 대기 모드로 있으면 자동으로 전원이 꺼집니다.

■ 기본 기능

GO 에는 네 가지 기본 동작 버튼 프롬프트가 있습니다. 이 버튼은 앱에서 원하는대로 맞춤 설정할 수 있습니다.

① QuickCapture : GoCapture 기능을 활성화하려면 GO 가 꺼져있을 때 Action 버튼을 한 번 누릅니다.

기본적으로 이 기능은 15 초짜리 비디오를 녹화합니다. 녹음 시작은 짧은 진동으로 표시되고 깜박이는 시안 색 빛이 뒤 따릅니다. 긴 진동은 녹음이 끝났음을 나타내며, 이후 GO 는 자동으로 전원을 끕니다.

② 싱글 탭 : GO 가 켜져있을 때 액션 버튼을 한 번 누릅니다 .

기본적으로이 기능은 사진을 찍기 위해 설정됩니다 . 긴 진동은 캡처가 성공했음을 나타냅니다 .

③ 두 번 살짝 누르기 : GO 가 켜져있을 때 빠르게 연속으로 두 번 누르십시오 .

기본적으로이 기능은 Hyperlapse 를 사용하도록 설정됩니다 . 짧은 진동과 빠르게 깜박이는 시안 색 표시등은 녹음이 시작되었음을 나타냅니다 . 긴 진동으로 표시된 녹음을 끝내려면 다시 살짝 두드립니다 .

④ 트리플 탭 : GO 가 켜져있을 때 액션 버튼을 세 번 빠르게 탭합니다 .

기본적으로이 기능은 Slow Mo 비디오 녹화를 시작하도록 설정되어 있습니다 . 짧은 진동과 천천히 점멸하는 청록색 표시등은 녹음이 시작되었음을 나타냅니다 . 긴 진동으로 표시된 녹음을 끝내려면 다시 살짝 두드립니다 .


■ 기능 사용자 정의

블루투스 또는 충전 케이스를 통해 휴대 전화에 GO 를 연결하십시오 . 그런 다음 " 설정 " 페이지로 이동하여 " 카메라 버튼 설정 " 을 선택하십시오 . 여기에서 원하는 촬영 모드를 GO 의 네 가지 기본 동작 버튼 프롬프트에 할당 할 수 있습니다 .

자세한 제품 정보는 <https://www.insta360.com/r/godetail> 을 참조하십시오 .

6 블루투스 연결


1 단계 : 휴대 전화의 블루투스를 켭니다 .

2 단계 : 두 번의 짧은 진동으로 표시되는 GO 버튼을 길게 누르십시오 . 그런 다음 앱을 열고 화면 하단의 카메라 아이콘  을 탭합니다 . " Insta360 GO 연결 " 을 탭하면 " Please choose your camera (카메라 선택) " 팝업 창이 나타납니다 . GO 를 선택하고 화면의 지시에 따라 연결을 완료하십시오 (카메라의 이름은 " GO * * * * * " 입니다) . 여기서 * * * * * 는 일련 번호의 마지막 6 자리입니다 . 상자에 GO 가 들어 왔음) .

노트 :

- 1) GO 가 30 초 이상 대기 모드로 있으면 자동으로 전원이 꺼집니다 .
- 2) GO 의 효과적인 블루투스 범위는 최적 조건에서 33 피트 (10 미터) 입니다 .

3 단계 : 블루투스를 통해 GO 에 성공적으로 연결되면 앱을 통해 사진이나 동영상상을 캡처 할 수 있습니다 .

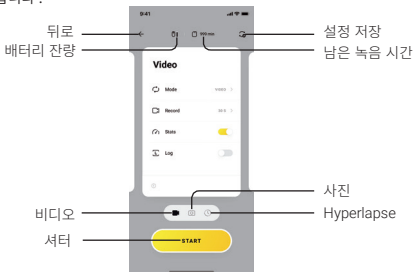


* 여기서 기본 비디오 모드의 인터페이스가 예제로 사용됩니다 .

6 어디에서나 마운트



간편한 클립

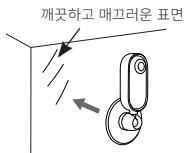

피벗 스탠드 + 피벗 스탠드베이스

마그네틱 펜던트는 셔츠 아래에 착용해야 합니다 .



자석 펜던트



끈적 끈적한 기초

중대한 !

- 1) 1/4 " 고정 나사를 사용하여 피벗 스탠드를 다른 호환 액세서리에 연결할 수 있습니다.
- 2) 두꺼운 옷은 펜던트의 자기력을 약화시킬 수 있으므로 두꺼운 옷으로 GO 를 사용하지 말고 촬영 전에 항상 GO 의 안정성을 테스트하십시오 .
- 3) 심장 박동기를 착용하는 사람들은 펜던트를 착용하지 않아야합니다 .
- 4) 피벗 스탠드 및 스티키베이스를 사용할 때는 건조하고 깨끗한 평평한 표면에 부착하십시오 . 강한 진동이있는 표면에 부착하지 마십시오 .
- 5) 끈끈한 받침대 또는 회전 받침대가 끈적 거림을 잃은 경우 물로 닦고 다시 말리십시오 . 사용 후 끈적 거림을 유지하기 위해 원래 커버를 다시 붙이십시오 . 고온 또는 저온 환경에서 끈끈한 받침대 또는 피벗 스탠드를 놓지 마십시오 .

* 기권

이 면책 조항을주의 깊게 읽으십시오 . 카메라 및 관련 액세서리를 사용한다는 것은이 면책 조항을 확인하고 동의 함을 의미합니다 .

사용하기 전에 액세서리가 올바르게 작동하는지 확인하십시오 . 손상이나 불규칙성이 있으면 즉시 사용을 중지하십시오 .

액세서리 자체의 품질 문제로 인해 직접적으로 발생하지 않는 손상에 대해서는 사용자가 전적으로 책임집니다 . 카메라 손상 , 인체 및 물체의 손상 등과 같은 비정상적인 사용으로 인한 기타 직접 , 간접 또는 우발적 인 손실에 대해서는 Shenzhen Arashi Vision Co., Ltd. (이하 "Insta360") 는 어떠한 책임도 지지 않습니다 .

주 법률 및 규정의 범위 내에서 Insta360 은 약정에 대한 최종 설명 및 개정 권한을 보유합니다 .